

IMPROVE YOUR PA46 / P46T (NO STC)

NO MORE FREEZING OR MIST ON THE PILOT'S SIDE INSIDE LEFT WINDOW.


THE SOLUTION: AN INSULATING INNER WINDOW PANE.
SEVEN STEPS TO GET THE INNER ACRYLIC PANE WINDOW INSTALLED




1. REMOVE THE INTERIOR HEADLINER AND CLEAN THE INSIDE OF THE WINDOW FRAME. HOLD THE ACRYLIC PANE IN FRONT OF THE WINDOW., IDENTIFY THE OPTIMAL POSITION AND MARK IT



2. AFFIX THE DOUBLE SIDED ADHESIVE TAPE. SEE TAPE CUT OFF POINTS IN THE DRAWING

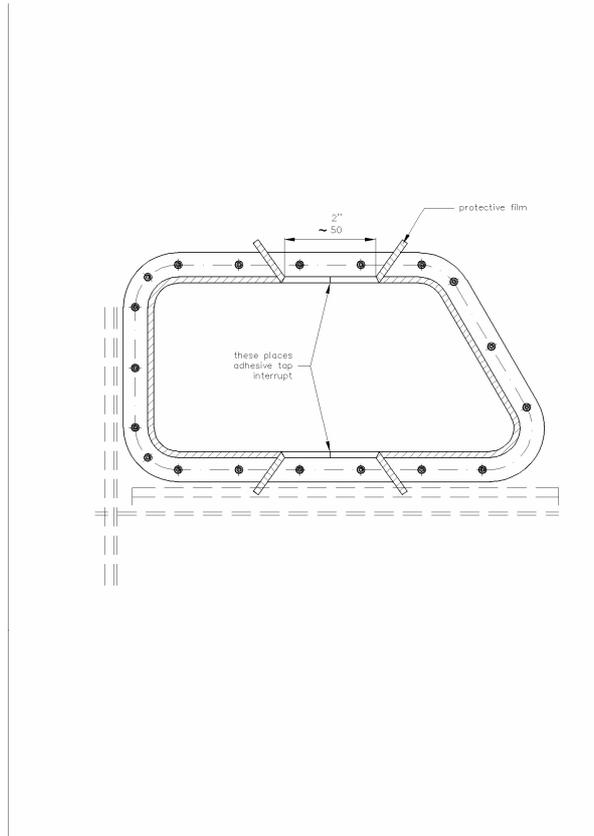

3. REMOVE THE PROTECTIVE FILM FROM THE ADHESIVE TAPE FOR ABOUT 2 INCH (50 mm) BUT START AT THE UPPER MIDDLE AND THEN AT THE LOWER MIDDLE OF THE JUNCTION. FIX THE ACRYLIC PANE ON THE REMOVED PROTECTION FILM.

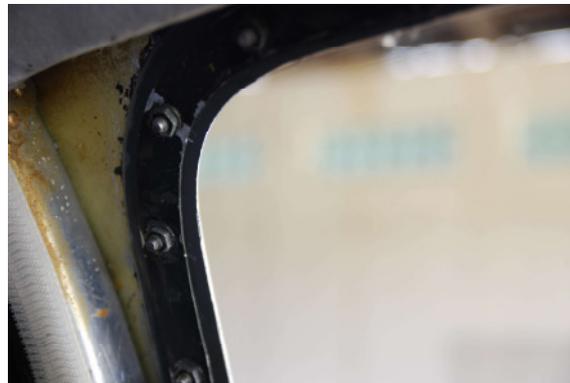


4. FIX THE ACRYLIC PANE PROPERLY THEN REMOVE THE REMAINING PROTECTION FILM FROM THE ADHESIVE TAPE AND PRESS THE GLASS PLATE ONTO THE DOUBLE SIDED ADHESIVE TAPE



5. REINSTALL THE INTERIOR HEADLINER



6. OUTSIDE VIEW AFTER INSTALLING THE ICE OR MIST PROTECTING SECOND INSULATION GLASS

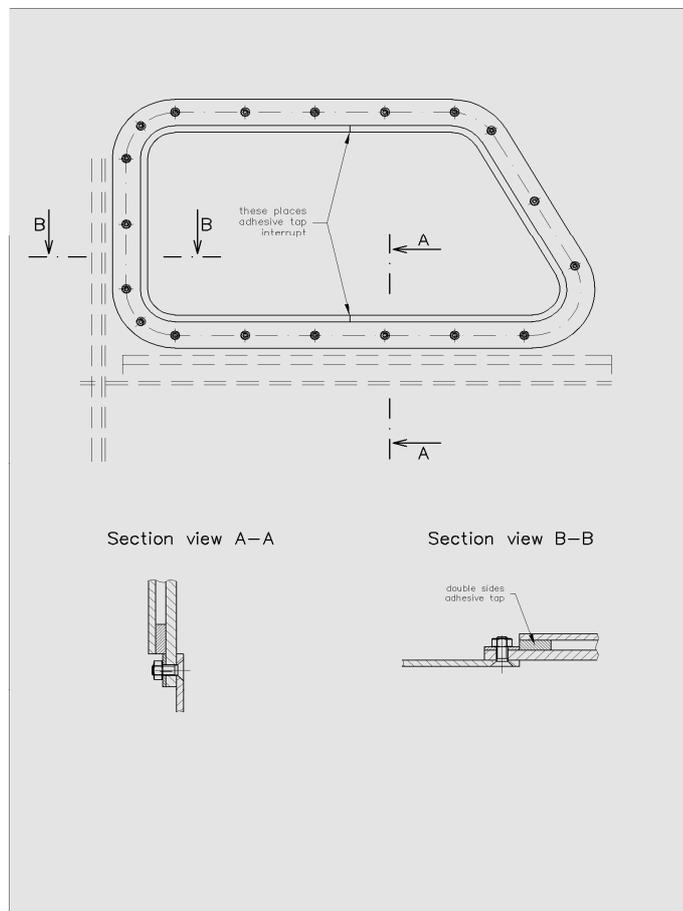

6. SECTION VIEW

FOR THE ORDER PROCESS WE HAVE TO KNOW WHETHER:

- 1.) YOU ARE INSTALL THE INSULATION PANE IN AN OLD SIDE WINDOW WITH STORM WINDOW
- 2.) YOU ARE INSTALL THE INSULATION PANE IN THE NEW WINDOW VERSION WITHOUT STORM WINDOW